

D279TD Independent Zone Control

User's Guide


General Information

The D279TD Independent Zone Control is an arming station that provides you with control over a specified area of your security system. The D279TD gives you independent control of this area, regardless of whether the rest of your security system is armed or disarmed. Features of the D279TD include protection status display indicators, entry and exit delay time, prewarning sounder, individual zone annunciation, panic alert, and a user-programmable passcode.

The Zone Control Display

The Zone Control has three protection status display indicators: a DELAYED loop indicator, an INSTANT loop indicator, and an ARMED indicator.

DELAYED — When this green indicator is lighted, the delay area is ready to be armed. When the DELAYED indicator is not lighted, the area is not ready to be armed (check doors, windows, and motion detectors in the delay area).

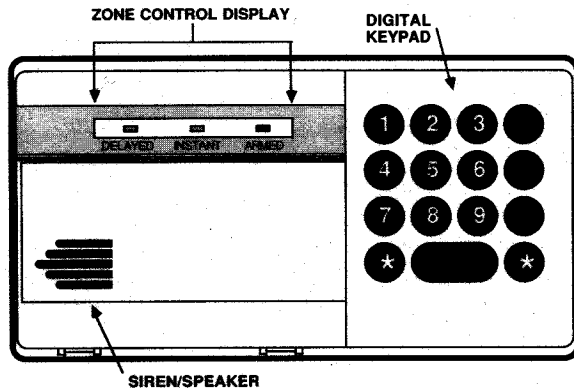

INSTANT — When this green indicator is lighted, the instant area is ready to be armed. When the INSTANT indicator is not lighted, the area is not ready to be armed (check doors, windows, and motion detectors in the instant area). Both the DELAYED and INSTANT indicators must be lit before arming.

ARMED — The red ARMED indicator is lighted when the area is armed and not lighted when the area is not armed. During exit delay (after the passcode is entered) the ARMED indicator blinks. **The indicator will not blink for alarm memory.**

The Digital Keypad

The Zone Control has a digital keypad used to enter your personal passcode into the security system. It is your personal passcode which arms and disarms the delayed and instant areas.

When entering your passcode, if the Zone Control emits a short warning tone each time you touch a key, check the DELAYED and INSTANT indicators. Both LEDs should be lit. If either LED is NOT lighted, check doors, windows, and motion detector vicinities in the protected area.

Arming

1. Ensure that the area is secure.

The green DELAYED and INSTANT lights must be on.

2. Arm the area by entering your personal passcode.

The red ARMED indicator light flashes on and off to indicate exit delay time (approximately 60 seconds). When the ARMED indicator lights steadily, the delay and instant areas are armed.

Disarming

Disarm the area by entering your personal passcode.

When the area is armed, you must enter the premises through a designated entry door to prevent an instant alarm condition. Opening the delay door starts a 30 second delay during which the Zone Control sounds a warning to remind you to disarm the system. To disarm the system, enter your personal passcode before the entry time expires. If you enter through a wrong door, or fail to disarm the system before the entry delay expires, you will generate an alarm.

Silencing the Alarm

Your alarm audible device sounds for a specific period of time before it shuts off automatically. If an alarm occurs and you want to silence the alarm, simply enter your personal passcode.

IMPORTANT: Some security systems do not permit the D279TD Zone Control to silence the alarm. If so, the alarm must be silenced from a different command center in your system.

My system can be silenced from the D279TD Zone Control.

My system must be silenced from the command center located:

Panic Alert (Optional)

The panic alert is available 24 hours a day, and is used to generate an instant alarm signal. Depending upon how your Zone Control was installed, the alarm can be a silent or an audible response. The panic alert is initiated by pressing the two * keys on the D279TD at the same time. NOTE: Some systems are not programmed for this feature.

- My system has a panic alarm feature.
- My panic alarm is silent.
- My panic alarm is audible.
- My system does not have a panic alarm feature.

User Programmable Passcode (Optional)

Your D279TD Zone Control provides you with the convenient feature of changing your personal passcode whenever you feel it necessary. It is recommended that you write down your old passcode and the new one before you begin.

- My system has this feature.
- My system does not have this feature.

Notes About Programming Your Personal Passcode:

- Programming must be completed in 60 seconds.
- You can program only while the Zone Control is disarmed and the DELAYED and INSTANT lights are on.
- Do not program the same digit twice in a row.
(Example: 2445)
- Do not program the first and the last digit the same.
(Example: 4564)
- The new passcode must be four digits in length.

Programming Steps:

1. Press the blank key once.
2. Enter the old passcode once.
3. Enter the new four digit passcode twice.
4. Test the new passcode by arming and disarming the independent zone.
5. If you encounter difficulties, repeat steps 1 through 4.

For installation and wiring instructions see Radionics Document #74-05229-000.

