


Westec 1000 80-90's

- 6 Burg
- 1 Fire
- 1 Tamper
- NO listen in

Code must start with 1

- To Power up for code in once
- Only two codes possible
- Three then code to set interior. Still needs to be Armed. (Away mode)
- One then code to set in (stay mode)
- Fire must reset twice to reset smoke detectors.
- Battery will die around 4 hours after power out.
- You can series 3 westec switches.

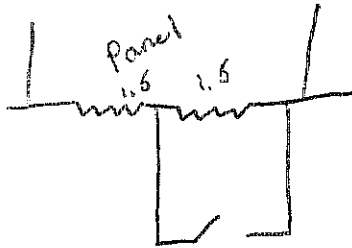

- 3000 open, 1.5 close
- Zones 1, 2, 3, 4. Need Westec switch
- Press 2 then 2 and code to stop trbl. Will stay silent until serviced - They try to Arm.
- If you don't use zone 5 and 6 they have to be jumped out.
- Maids Code must start with 4-1
- To enter Maid code hit 2 then 4 then code
- If Panel is turned off you will lose maid code
- Maid Code will not control interior.
- Maid Code will not silence trouble beeps.
- Only Uses Two wire smokes.

A1 = Burs

B2 = interior Code Press 3 then put in code

Dealer code = 0550

ANY KEYPAD

SETS/DISARMS/RESETS ALL ALARMS:
INTERIOR ON/OFF:

A-1 1 + CODE
B-2 3 + CODE OR PRESS THE
5 & 0 BUTTONS TOGETHER (EARLY
VERSION)

SECONDARY CODE SETS/DISARMS/RESETS ALL ALARMS:
DURESS:
FORCEARM AROUND OPEN ZONE:
FIRE RESET:

B-3 4 + 1 + CODE
B-4 ~~*B-4*~~ 5 + CODE
B-5 6 + CODE
1 + CODE + 1 + CODE

MAIN KEYPAD

NITE ON/OFF:

A-2 2 + 1 + CODE OR PRESS THE 4 & 0
BUTTONS TOGETHER (EARLY
VERSION)

SILENCES TROUBLE SOUNDS/FLASHING LIGHT AFTER
AFTER AC LOSS OR LOW BATTERY
TRIGGERS SYSTEM TEST:
ADD SECONDARY CODE:

A-3 2 + 2 + CODE
A-4 2 + 3 + CODE
A-5 2 + 4 + CODE + 4 + 1 + SECONDARY
CODE (UP TO 7 DIGITS) WAIT FOR
BEEP

CHIME ON/OFF:

A-6 2 + 5 + CODE

MAIN PANEL

ON/OFF SWITCH:

BEHIND DOOR ON FRONT OF MAIN
PANEL. TURNING POWER OFF
WILL ERASE THE SYSTEM CODES
AND YOU WILL HAVE TO RE-
ENTERED.

RE-ENTERED CODES:

TURN SYSTEM OFF, THEN ON. YOU
HAVE 1 MINUTE TO ENTER THE
NEW CODE. AT THE NEAREST
KEYPAD ENTER 1, THE SYSTEM
WILL ENTER THE SECOND DIGIT + 4
DIGIT DISARM CODE. IF YOU DO
NOT DO THIS WITHIN 1 MINUTE,
THE SYSTEM WILL ENTER THE
DEFAULT OF 5 + 5 + 1 + 2 + 3 + 4. IF
ANY OPEN ZONES, THE SYSTEM
WILL ARM AND THEN GO INTO
ALARM. IF THIS HAPPENS YOU
WILL NEED TO START OVER.

ZONES PROGRAMMING "B"

Option Code

A,1	Zone 1	
A,2	Zone 2	
A,3	Zone 3	Memorize
A,4	Zone 4	
A,5		
A,6		
B,1	Zone 1	
B,2	Zone 2	
B,3	Zone 3	Entry/Exit
B,4	Zone 4	
B,5	Zone 5	
B,6	Zone 6	
C,1	Zone 1	
C,2	Zone 2	
C,3	Zone 3	Interior
C,4	Zone 4	
C,5	Zone 5	
C,6	Zone 6	
D,1		
D,2		
D,3		
D,4		
D,5		
D,6		
E,1		
E,2		
E,3		
E,4		
E,5		
E,6		
F,1		
F,2		
F,3		
F,4		
F,5		

NOTE: Light on, zone is memorized.
Light off, zone is not memorized or memorized in Trouble.
Any zone memorized while in Trouble will be ignored.