

DS7080iP-32 Security System User's Guide

An instruction guide for your alarm system
when used with a
DS7443S, DS7445 or DS7447 keypad

System Overview

Congratulations on the installation of your new security system. No other investment can provide such peace of mind. Welcome to the DS7080iP-32 intrusion/fire control system. Since each installation is unique, yours will contain some, but not necessarily all of the features mentioned in this guide.

A security system usually consists of:

- **A Control Panel:** The control panel is the center of your intrusion/fire alarm system. It supports such vital functions as receiving trouble and alarm signals from detectors, the sounding of bells and/or sirens, and communicating with your alarm monitoring company.
- **Command Control Stations (Keypads):** The keypad is where you interact with the system. The keypad displays critical information concerning the operation of your alarm system, plus it allows you to initiate commands such as arming and disarming.
- **Protected Zones:** Your security system may contain protected windows and doors (perimeter zones), plus various internal sensors. Your control panel separates perimeter zones from interior protection zones. Specific protection devices may include:
 - **Glass breakage sensors:** Devices that detect the sound of breaking glass.
 - **Interior motion sensors:** Electronic sensors (e.g. passive infrared) that detect movement within an interior zone.
 - **Magnetic contacts:** Switches used to detect the opening of doors or windows.
 - **Smoke detectors:** Devices that detect products of combustion.



This system includes a telephone line seizure feature. The system may be programmed to communicate with a central monitoring station to report system events. You will not be able to use your phone while the system is communicating with the central monitoring station. In the unlikely event that the central station is not able to receive the report, your phone may be unavailable for up to 20 minutes while the panel makes additional communication attempts.

Table of Contents

System Overview	2	Setting Delayed Arming	19
Understanding the DS7443S, DS7445 and DS7447 Keypads	4	Emergency Procedures	20
Understanding Partitioning	6	Turning OFF (Disarming) your System under Duress	21
Turning ON (Arming) your System	7	Fire Reset / Fire Trouble	23
Quick Arming Your System	9	Fire Safety	24
Turning OFF (Disarming) your System / Silencing Alarms ...	10	Personal Identification Numbers	26
Force Arming your System	11	Removing a PIN	26
Zone Bypassing	12	Error Displays	29
Chime Mode	13	Testing Your System	31
Access Control	14	Event History Readback	34
Setting the Date	15	Glossary	35
Setting the Time	16	Quick Reference Guide	36
Automatic Arming	17	System Features Reference Guide	37
Delaying Automatic Arming	18	Index	39



Your system may or may not be monitored by an alarm monitoring service.

If it is not monitored, it is vital to understand the following:

- *Alarms sound only at your location.*
- *When an alarm is sounded, no signals are sent out.*
- *Duress and other silent alarms are disabled.*
- *Emergency alarms sound only at your location.*

Understanding the DS7443S, DS7445 and DS7447 Keypads

This chart will help you understand what each Light/LED represents.


The DS7443S is an LED keypad; its LEDs 1-6 represent the first 6 zones of the system (zones 7-32 are not displayed).

The DS7445 is an LED keypad; its LEDs 1-8 represent the first 8 zones of the system (zones 9-32 are not displayed).

The DS7447 is an alphanumeric LCD keypad.

All three keypads display information on various control panel functions as indicated in the following charts.

A built-in sounder is used to annunciate keystroke entries and as an interior warning device.

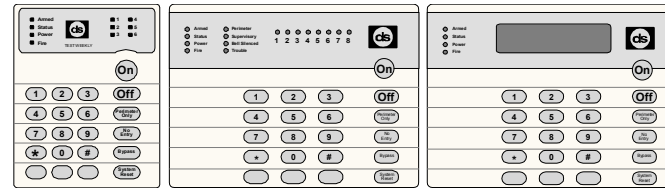

DS7443S

DS7445

DS7447

Light	Off	Flashing	On
Armed (red)	The control panel is disarmed.	1- Alternating On/Off. Exit delay is in progress or an alarm has occurred. 2- Blinks Off once every 2 seconds. Partition 1 is armed and Partition 2 is not armed. 3- Blinks Off twice every 2 seconds. Partition 2 is armed and Partition 1 is not armed.	The control panel is armed, (in a partitioned system, both partitions are armed) and no alarms have occurred.
Status (green)	One or more zones are not ready to arm.	One or more zones are bypassed.	All zones are ready to arm.
Power (green)	The control panel has lost power. There is no AC or battery.	Control panel problems exist. See <i>Error Displays</i> on p. 25.	The control panel is in normal operation. It is running on AC power with no problems.
Fire (red)	There are no fire alarms.	A fire zone is in alarm.	A fire trouble condition exists.

continued on next page

Understanding the DS7447, DS7443S and DS7445 Keypads (continued)

Lights Present only on the DS7443S Keypad

Light	Off	Flashing	On
LEDs 1-6 (red)	There are no zone alarms.	A zone (1-6) has been alarmed. (Zones 7-32 are not displayed.)	A zone (1-6) is Not Ready to Arm or if a fire zone, a trouble condition exists. (Zones 7-32 are not displayed.)

Lights Present only on the DS7445 Keypad

Light	Off	Flashing	On
Perimeter (yellow)	The perimeter is not armed.	This Light will not flash.	The perimeter is armed.
Supervisory (yellow)	This Light is not used by the DS7080iP-32.	Not used.	Not used.
Bell Silenced (yellow)	The bells do not need to be or have been silenced.	This Light will not flash.	There has been a Fire alarm and the bells have been silenced. To clear, enter the Fire Rest command.
Trouble (yellow)	There are no trouble conditions.	This Light will not flash.	A trouble condition exists.
LEDs 1-8 (red)	There are no zone alarms.	A zone (1-8) has been alarmed. (Zones 9-32 are not displayed.)	A zone (1-8) is Not Ready to Arm or if a fire zone, a trouble condition exists. (Zones 9-32 are not displayed.)

Understanding Partitioning

Your alarm system may be Partitioned.

A **Partitioned** system is a system that is divided into two areas which may be armed and disarmed independently.

The following applies in a Partitioned system:

- User PIN numbers are always required to perform operations in a Partitioned system.
- DS7447 LCD keypads will alternately display (about every 2 seconds) the current status of each partition.
- DS7443S and DS7445 LED keypads will alternately display (about every 2 seconds) the current status of each partition by way of the LED's. See "Understanding the DS7447, DS7443S and DS7445 Keypads" on pages 4 and 5 for details.
- If the User PIN has authority in only one Partition, using that PIN on any keypad will perform Arming and Disarming commands only for the Partition in which the User has authority.
- If the User PIN has authority in both Partitions, the User may arm or disarm both Partitions by entering the commands from any keypad.
- Only Users with access to both partitions can arm common zones.
- If the User PIN has authority in both Partitions, the User may arm or disarm the **first Partition only** by entering the [PIN] + [#] [#] + [Arming/Disarming command]. To perform arming or disarming commands in the **second Partition only**, enter the [PIN] + [#] [#] [#] + [Arming/Disarming command].
- If **Custom Arming** ([PIN] + [#] [4]) is used in a Partitioned system, the following will apply:
 - Users with access to both partitions can Custom Arm all zones.
 - Users with access to both partitions cannot custom arm a single partition.
 - Users with access to Partition 1 can Custom Arm any zones in Partition 1 but cannot arm common zones or zones in Partition 2.
 - Users with access to Partition 2 can Custom Arm any zones in Partition 2 but cannot arm common zones or zones in Partition 1.

Turning ON (Arming) your System

This chart explains the five normal ways to arm the system.

The green Status Light must be on steady and the display (if using the DS7447 keypad) must read **“Ready to Arm”** in order to arm the system with one of these commands. If the green Status Light is not on, or if the display (if using the DS7447 keypad) is reading **“Not Ready,”** then see *Force Arming* or *Zone Bypass* for other ways to arm the system.

If this is a Partitioned system, please read “Understanding Partitioning” before using this chart.

Type of Arming Desired	Command Sequence**	What will Happen <small>* = DS7447 only</small>	What to Do
<p style="text-align: center;">Normal Arming (Arm Level 1) No one left on the premises. An entry/exit delay is in effect.</p>	[PIN] + [On]	<ul style="list-style-type: none"> A single beep will sound. The red Armed Light will begin to flash. The green Status Light will turn off. “Armed” will be displayed.* “Exit Now” will be displayed during the exit delay interval.* The red Armed Light will turn on steady after the exit delay expires. 	Exit during the exit delay interval.
<p style="text-align: center;">Perimeter Instant Arming (Arm Level 2) Someone still on the premises. There is NO entry delay in effect.</p>	[PIN] + [No Entry] + [Perimeter Only]	<ul style="list-style-type: none"> A single beep will sound. The red Armed Light will begin to flash. “Perimeter Inst.” will be displayed.* “Exit Now” will be displayed during the exit delay interval.* The red Armed Light will turn on steady after the exit delay expires. The yellow Perimeter Light will turn on steady. Only exterior protection zones will be armed. 	Move freely around the interior.

** = If in “Residential Mode”, a PIN is not required for these commands.

Note: In commercial burglar alarm applications for UL Listed Requirement systems, a ring-back indication and bell test should be heard after arming (closing). If not heard, call for service.

Turning ON (Arming) your System (continued)

If this is a Partitioned system, please read “Understanding Partitioning” before using this chart.

Type of Arming Desired	Command Sequence**	What will Happen * = DS7447 only	What to Do
<p>Perimeter Arming (Arm Level 3)</p> <p>Someone still on the premises.</p> <p>The entry/exit delay is in effect.</p>	<p>[PIN] + [Perimeter Only]</p>	<ul style="list-style-type: none"> A single beep will sound. The red Armed Light will begin to flash. “Perimeter On” will be displayed.* “Exit Now” will be displayed during the exit delay interval.* The red Armed Light will turn on steady after the exit delay expires. The yellow Perimeter Light will turn on steady. Only exterior protection zones will be armed. 	<p>Move freely around the interior.</p>
<p>Custom Arming (If programmed) (Arm Level 4)</p> <p>Ask your installing company to explain the type of arming that occurs when using this command.</p>	<p>[PIN] + [#] [4]</p>	<ul style="list-style-type: none"> A single beep will sound. The red Armed Light will begin to flash. “On Partial” will be displayed.* “Exit Now” will be displayed during the exit delay interval.* The red Armed Light will turn on steady after the exit delay expires. Some zones will be bypassed. 	<p>Exit during the exit delay interval.</p>
<p>Maximum Security Arming (Arm Level 4)</p> <p>No one left on the premises.</p> <p>There is NO entry delay in effect. An alarm WILL occur upon entry.</p>	<p>[PIN] + [No Entry] + [On]</p>	<ul style="list-style-type: none"> A single beep will sound. The red Armed Light will begin to flash. The green Status Light will turn off. “Armed Instant” will be displayed.* “Exit Now” will be displayed during the exit delay interval.* The red Armed Light will turn on steady after the exit delay expires. 	<p>Exit during the exit delay interval.</p> <p>CAUTION: Violating any zone after the exit delay will cause an instant alarm.</p>

** = If in “Residential Mode”, a PIN is not required for these commands.

Note: In commercial burglar alarm applications for UL Listed Requirement systems, a ring-back indication and bell test should be heard after arming (closing). If not heard, call for service.

Quick Arming Your System

This chart explains four ways to quick arm the system from the keypads.

If Quick Arming is not used, a PIN must be entered at the beginning of all arming command sequences.

Quick Arming is not available in a partitioned system.

When Quick Arming is used, the following shortcuts are available:

Quick Arming Command Sequence	Type of Arming
[#] + [On]	Normal Arming
[#] + [No Entry] + [Perimeter Only]	Perimeter Arming – No Entry Delay
[#] + [Perimeter Only]	Perimeter Arming – Entry/Exit Delay
[#] + [No Entry] + [On]	Maximum Security Arming

Turning OFF (Disarming) your System / Silencing Alarms

This chart explains proper procedures for disarming and/or silencing alarms.

Please read the section about Emergency Procedures prior to being confronted with an emergency event.

If you have entered the building through a perimeter door, you may hear a steady pre-alert tone from the keypads. If so, disarm according to the chart below.



If the bells and sirens are on and/or the red Armed Light is flashing, then the keypad is signaling that an alarm has occurred sometime before your arrival. The DS7447 will display “**Zone Alarm**”. The DS7443S zone LEDs (1-6) (Zones 7 - 32 will not be displayed) or the DS7445 zone LEDs (1-8) (zones 9 - 32 will not be displayed) will be flashing for the corresponding zone that is in alarm.

- The keypad will also issue a pulsed tone during the entry delay instead of the usual steady tone.
- If the alarm has not been previously investigated, do not enter the building unless accompanied by the appropriate Emergency Services’ personnel.

Action Desired	Command Sequence	What will Happen *
Disarming the System	[PIN] + [Off]	The red Armed Light will turn off. Pre-alert sounders will silence.
Silencing Alarms	[PIN] + [Off]	The red Armed Light will turn off. Zone LEDs (1-6) on the DS7443S will turn off. (Zones 7 - 32 are not displayed) Zone LEDs (1-8) on the DS7445 will turn off. Alarms in progress will silence. (Zones 9 - 32 are not displayed.)

* In non-partitioned systems. For systems with partitioning, review the sections on “Understanding the Keypads” and “Understanding Partitioning”.

Force Arming your System

This chart explains the procedure for Force Arming your system if one or more zones are faulted.

When one or more zones are faulted, the system may be Force Armed (if programmed) by bypassing the faulted zones. The green Status Light will be off on all keypads when Force Arming is required to arm the system. The DS7447 display will read **“Not Ready”** and the DS7443S and DS7445 zone LEDs will be on (the DS7443S cannot display zones 7 - 32 and the DS7445 cannot display zones 9 - 32) if one of those zones is faulted. In a partitioned system, only users with authority to the faulted zone may perform the Force Arming of that Partition.

Force Arming during an AC power failure: Regular arming of the control panel is not permitted during an AC power failure. Having to Force Arm serves as a warning that the control panel is operating under backup battery.



Bypassing or Force Arming removes some of your building’s protection because it excludes the faulted zones from arming. Therefore, an intrusion may not be detected or the detection may be delayed. Always attempt to correct any zone problems (close doors and windows etc.) before using these features. If the problem can not be corrected, contact your installing company.

Note: See the section on **Zone Bypassing** for an alternate method of arming the system when faults exist. Force arming is not available in UL Listed systems.

Type of Arming	What will Happen	What to Do	What will Happen	What to Do
Force Arming (Arm Level 6) Enter any arming sequence.	<ul style="list-style-type: none"> A five second beep occurs, indicating the control panel has faulted zones and needs to be Force Armed. 	Press [Bypass] during the 5 second beep.	<ul style="list-style-type: none"> The red Armed Light will flash during the exit delay interval. The control panel will arm with the faulted zones bypassed, or a three-beep error tone occurs indicating Force Arming has not been accepted or allowed. 	Exit during the exit delay interval if leaving.

Note: If in “Residential Mode”, a PIN is not required for Force Arming.

Zone Bypassing

This chart explains the procedure for bypassing a faulted zone prior to arming the system.

There may be occasions when it is desirable or necessary to temporarily bypass one or more zones prior to arming the system. Bypass commands only work when the control panel is disarmed. For instance, an open window may cause the DS7447 display to read **“Not Ready”** followed by the zone number. The DS7443S and DS7445 may have one of its zone LEDs on steady (the DS7443S cannot display zones 7 - 32 and the DS7445 cannot display zones 9 - 32). Only one zone may be bypassed each time the command is used. If more than one zone requires bypassing, repeat the command for each zone to be bypassed.

Note: See **Force Arming** for another method of zone bypassing.

Type of Bypassing Desired	Command Sequence**	What will Happen	What to Do
Bypass Faulted Zones	[PIN] + [Bypass] [X] [X] (zone number)	The Status Light will begin to flash if no other zones are violated.	Arm control panel, if desired, with entered zone(s) bypassed.
Read Bypassed Zones	[PIN] + [Bypass]	“Bypass” will be displayed on the DS7447 followed by the zone number of any bypassed zones. The DS7443S and DS7445 will flash the zone LED of any zone being bypassed (the DS7443S cannot display zones 7 - 32 and the DS7445 cannot display zones 9 - 32).	
Clear Individual Bypassed Zone(s)	[PIN] + [Bypass] [X] [X] (zone number)	Individual zone bypasses will be cleared.	
Clear All Bypasses	[PIN] + [Bypass] [*]	All bypasses will be cleared.	

** = If in “Residential Mode”, a PIN is not required for these commands.

Chime Mode

This chart explains the procedure for turning ON and turning OFF Chime Mode.

Chime Mode causes all the keypad sounders to beep each time a Perimeter or Entry/Exit zone is violated while the control panel is off (disarmed). The [#] [7] command is used to both turn Chime Mode off and on.

You cannot set the Chime mode by partition.

Action Desired	Command Sequence*	What will Happen
Turn ON Chime Mode	[PIN] + [#] [7]	The keypad sounders will beep for two seconds each time a Perimeter or Entry/Exit zone is violated. The DS7447 display will read "Chime Mode On" for 5 seconds.
Turn OFF Chime Mode	[PIN] + [#] [7]	The DS7447 display will read "Chime Mode Off" for 5 seconds.

* = If in "Residential Mode", a PIN is not required for these commands.

Access Control

This chart explains the procedure for activating devices that require an Access Control PIN.

Your system may or may not use a keypad key sequence to activate other electrical devices.

The special PIN required to perform this function is known as an Access Control PIN.

This feature can be used in armed or disarmed modes.

The PIN may control devices that activate for a short period of time (e.g. electric locking mechanisms on a door).

Momentary Access Control Panel Activation	[Access Control PIN] + [Off]	The Access device will be acticated for 10 seconds.
--	------------------------------	---

This feature must be disabled on UL Listed Requirement installations.
The control panel is not a listed access control unit (UL294).

Setting the Date

This chart will guide you through the steps necessary to change the date displayed at the keypads.

You should write down your entries before you enter the Master Code Programming Mode and have them with you as you begin programming.

Make your entries promptly. If a long delay occurs in your entries, the 3-beep error tone sounds and exits you from the programming mode.

It is recommended that this procedure be performed at a DS7447 keypad.
No visual clues will be given from the DS7443S or DS7445 keypads.

Steps to Change the Date	Command Sequence	If Accepted, DS7447 Display Reads
# 1. Enter the Master Code Programming Mode.	[Master Code] + [#] [0]	"2 Change Date" (display will scroll to this)
# 2. Enter a 2.	[2]	"Enter Month" (01...12)
# 3. Enter the Month.	[0] [1] through [1] [2] January December	"Enter Day." (01...31)
# 4. Enter the Day.	[0] [1] through [3] [1]	"Enter Year." (XX) End with #
# 5. Enter the Year.	The last two digits of the year, followed by the [#] key.	"Month, Day, Year" A long beep signifies acceptance.

Note: Entering the command sequence [Master Code] [#] [0] [2] [#] will cause the DS7447 keypad to read back the date.

Note: If the control panel loses power, the date will need to be set again.

Setting the Time

This chart will guide you through the steps necessary to change the Time displayed at the keypads.

You should write down your entries before you enter the Master Code Programming Mode and have them with you as you begin programming.

Make your entries promptly. If a long delay occurs in your entries, the 3-beep error tone sounds and exits you from the programming mode.

It is recommended that this procedure be performed at a DS7447 keypad.
No visual clues will be given from the DS7443S or DS7445 keypads.

Steps to Change the Time	Command Sequence	If Accepted, DS7447 Display Reads
# 1. Enter the Master Code Programming Mode.	[Master Code] + [#] [0]	"6 Change Time" (display will scroll to this)
# 2. Enter a 6.	[6]	"Enter Day" (1...7)
# 3. Enter the Day.	[1] through [7] Sunday Saturday	"Enter Time." (0100...1259)
# 4. Enter the Time. (Hour and minute)	[0] [1] [0] [0] through [1] [2] [5] [9]	"Enter AM/PM." (4/6) End with #
# 5. Enter AM or PM.	[4] [#] or [6] [#] (4=AM, 6=PM)	"Day - Time" A long beep signifies acceptance.

Note: Entering the command sequence [Master Code] [#] [0] [6] [#] will cause the DS7447 keypad to read back the time.

Note: If the control panel loses power, the time will need to be set again.

Automatic Arming

To inform occupants that the system is about to arm, a pre-arming period will begin 15 minutes before the system arms automatically. If programmed by the installing company, the keypad sounders, and any outputs programmed to follow the keypad sounders, will pulse five times every minute. During the last five minutes before arming, these sounders will be on steady. Once per minute the DS7447 keypad will read, "Arm in nn min./PIN + OFF - extend."

Automatic Arming will affect only the partitions you have access to.

Each partition can be programmed to automatically arm once per day. To program the Automatic Arming Time, perform the following:

Setting the Automatic Arming Time	Notes		
Enter a [Master PIN] + [#] + [0]	Setting the Automatic Arming Time can only be performed with a Master Code PIN.		
Enter a [1]	Enters the Automatic Arm Setup programming		
Enter the partition number. Press [#] to exit.	The program will prompt you to enter partition 1 or 2 if the system is partitioned and if the user has access to both partitions. If the system is not partitioned or if the user has access to only one partition this selection will not appear. In a non-partitioned system, the display will automatically go to Sunday. The user will only be allowed to program the partitions to which they are assigned.		
Enter a time for each day. Enter in [0] [1] [0] [0] [#] format.	The display will start with Sunday. It will read, "Sunday - nn : nn" Enter the time in 24 hour format. You may move the cursor left or right by pressing the "A" (Fire) or "C" (Panic) keys. When you have completed the time entry press [#] key. The display will then advance to the next day. You may exit the Set Auto Arm Time Mode at any time by pressing [*] once. The system will also exit the Auto Arm Time mode after the time is programmed for Saturday. <table style="width: 100%; border: none;"> <tr> <td style="border-right: 1px solid black; padding-right: 10px;"> Samples of times: 12 midnight = 2400# 12:01am = 0001# 1:00am = 0100# Disabled = 0000# </td> <td style="padding-left: 10px;"> 12 noon = 1200# 12:01pm = 1201# 1:00pm = 1300# </td> </tr> </table>	Samples of times: 12 midnight = 2400# 12:01am = 0001# 1:00am = 0100# Disabled = 0000#	12 noon = 1200# 12:01pm = 1201# 1:00pm = 1300#
Samples of times: 12 midnight = 2400# 12:01am = 0001# 1:00am = 0100# Disabled = 0000#	12 noon = 1200# 12:01pm = 1201# 1:00pm = 1300#		

Note: The panel time and date must be set in order for this feature to work properly.

Delaying Automatic Arming

This section explains how to delay the Automatic Arming Time.

To inform occupants that the system is about to arm, a pre-arming period will begin 15 minutes before the system arms automatically. If programmed by the installing company, the keypad sounders, and any outputs programmed to follow the keypad sounders, will pulse five times every minute. During the last five minutes before arming, these sounders will be on steady.

Once per minute the DS7447 keypad will read, "Arm in nn min./PIN + OFF - extend."

Delayed Automatic Arming will affect only the partitions you have access to.

To extend the Automatic Arming of the system during the automatic arming pre-arming period, perform the following steps:

Extending Automatic Arming *	What will Happen
Enter a [PIN]	
Press [OFF]	The arming time will be extended 30 minutes. A new pre-arming period will begin 15 minutes prior to the new automatic arming time.

* = To extend the Automatic Arming at any time, use the Delayed Arming feature in the "Setting Delayed Arming" section.

Note: The keypad volume setting also applies to the Auto Arm tone.

Note: The panel time and date must be set in order for this feature to work.

Setting Delayed Arming

This section explains how to cause the system to arm after a specified number of hours.

Delayed arming is simply causing the system to arm after a specified number of hours. To program the system for delayed arming, perform the following steps:

Delaying Arming	Notes
Enter a [PIN]	
Enter [#] [9] [9]	Enters the Delayed Arming programming.
The keypad will display the following: Arm in nn Hours # to accept	Enter the number of hours (up to 24) from now that you would like the system to arm. If no changes are required, you may press [*] to exit. For example: If it is 3:30 now, and you would like the system to arm at 9:30, enter 06.

Additional Notes: Delayed arming can be used even if there are no automatic arming times programmed.

Setting Delayed Arming will affect only the partitions you have access to. Users with PIN levels of 0-2 will be able to set Delayed arming. Delayed arming will override automatic arming. Delayed arming will also provide a 15 minute pre-arm period like the one provided with automatic arming.

You may view the time left (rounded to the nearest hour) to the arming time by entering [PIN] + [#] [9] [9]. The display will show "Arm In __ Hours". Pressing the [*] key will exit the display without changing the arming time.

Note: The panel time and date must be set in order for this feature to work.

Emergency Procedures

Identifying Alarm Sounds

Your alarm system may be programmed for a steady alarm sound or a pulsed alarm sound. It is important to learn the difference between a fire alarm sound and an intrusion alarm sound before you are confronted with an actual emergency.

Silencing Alarms

All alarms can be silenced with any PIN that has disarm privileges. Entering your [PIN] + [Off] will silence the alarm and turn off (disarm) the control.

A Cautionary Note

How you respond to an alarm will depend, mostly, on the type and time of the alarm. You should seek the advice of your installing company as they install your system, **not** later (e.g. after an alarm) to develop a response plan.

Above all else, common sense should prevail.

If there is any threat or hint of danger to yourself or others on the premises, such as in the event of a fire alarm, everyone should be instructed to leave the premises immediately. Do not enter the premises unless accompanied by the appropriate Emergency Services' personnel, or after they have given the OK to enter.

Caution When Entering A Building

If the bells and sirens are on and/or the red Armed Light is flashing with the DS7447 display reading "**Zone Alarm**", or the DS7445 zone LEDs 1-8 are flashing, or the DS7443 zone LEDs 1-6 are flashing, then the keypad is signaling that an alarm has occurred. The keypad will also issue a pulsed tone during the entry delay instead of the usual steady tone.

If the alarm has not been previously investigated, **do not enter the building unless accompanied by the appropriate Emergency Services' personnel.**

Fire Alarms

Fire Alarms are silenced using the same procedure as intrusion alarms: a [PIN] (with disarm privileges) + [Off].

The Fire Alarm system is **not** reset until alarms at smoke detectors are cleared by using the [System Reset] command. The Fire Alarm system will **not** be functional until this procedure has been followed. See the "Fire Reset / Fire Trouble" section for more information.

Turning OFF (Disarming) your System under Duress


This chart explains the proper procedure for disarming under duress.

Ask your installer if the Duress feature has been activated.

A Duress code is used when someone demands, by threatening your life or well-being, that the system be turned off. When used, the code will both turn off the system and report a silent Duress alarm if connected to a monitoring service. Extreme care should be used when entering your PIN to turn off the system, so a Duress code is not inadvertently entered. The Duress code will only disarm partitions that it has been assigned to.

Type of Disarming	Command Sequence	What will Happen
Disarming the System with the Duress code	[Duress Code] + [Off]	The system will appear to disarm normally. A Duress report will be sent to your monitoring service.

Emergency Keypad Alarms / Silencing Alarms

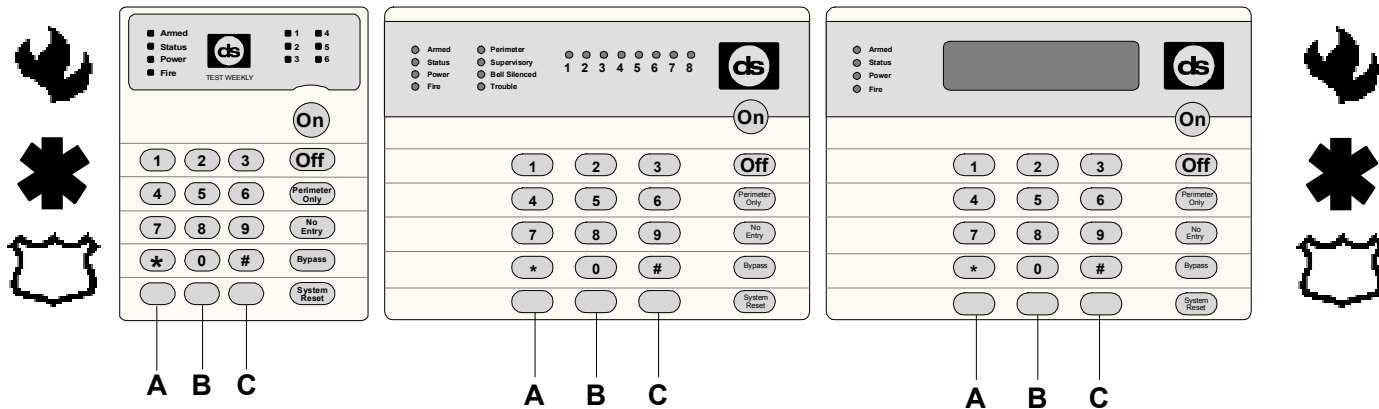

The Emergency Alarm Keys A, B and C may generate Fire, Special Emergency, and Panic Alarms if programmed by the installer. Ask your installing company to explain the function of these keys.

When using the Emergency Alarm Keys, they must be pressed for two seconds to generate an alarm.

Note: If the Emergency Alarm Keys are to be used, they should be labeled to signify their functions.
 The A key should be labeled as the Fire key. This is the only key that may be designated as the Fire key.
 The B key should be labeled as the Special Emergency key.
 The C key should be labeled as the Panic key.

Use the Disarming Command Sequence to cancel or silence these alarms.

Fire Reset / Fire Trouble

Fire Reset

During a fire alarm, exit the premises immediately. When you have determined there is no fire, it is recommended that you silence the bells/sirens before you initiate the [System Reset] command.



Before the [System Reset] command is used, determine which smoke detector has alarmed so the installing company may verify its operation.

A PIN followed by the [System Reset] key will reset any smoke detectors after a fire alarm has occurred.

[PIN] + [System Reset]

Note: To use the System Reset command sequence, your PIN must have disarm privileges.

The System Reset command will perform a fire reset, will perform a battery test, and will clear all system troubles.

Fire Trouble

A Fire Trouble display signifies a problem with the fire system, such as a break in the wiring that monitors smoke detectors.

A Fire Trouble will be indicated by a short beep from the keypad sounders every 10 seconds. The DS7447 keypad will display “**Fire Trouble**” followed by the zones in a trouble condition.

The DS7443S and DS7445 keypads will turn the Fire and Trouble Lights on steady and will light the corresponding zone LEDs (the DS7443S will not display zones 7 - 32 and the DS7445 will not display zones 9 - 32).

Notify your installing company immediately if the Fire Trouble message is displayed.

The Fire Trouble beep can be silenced with any [PIN] followed by [Off]. After problems have been remedied, a [PIN] + [System Reset] should be entered to clear the “**Sounder Silenced**” display.

Fire Safety



WARNING

No fire detection system should be considered 100 percent foolproof

This fire alarm system can provide early warning of a developing fire. Such a system, however, does not ensure protection against property damage or loss of life resulting from a fire. Any fire alarm system may fail to warn for any number of reasons (e.g. smoke not reaching a detector that is behind a closed door).

When considering detectors for residential applications, refer to NFPA Standard 72, "The National Fire Alarm Code." This standard is available at a nominal cost from: The National Fire Protection Association, Batterymarch Park, Quincy, MA 02269.

If Installed in Family Residences

Adherence to the NFPA Standard 72 can lead to reasonable fire safety when the following items are practiced:

- **Minimize hazards:** Avoid the three traditional fire killers: smoking in bed, leaving children home alone, and cleaning with flammable liquids.
- **Providing a fire warning system:** Most fire deaths occur in the home, the majority, during sleeping hours. The minimum level of protection requires smoke detectors to be installed outside of each separate sleeping area and on each additional story of the dwelling.




WARNING

For added early warning protection, it is recommended that detectors be installed in all separated areas including the basement, bedrooms, dining room, utility room, furnace room, and hallways.

Having and Practicing an Escape Plan

A fire warning may be wasted unless the family has planned in advance for a rapid and safe exit from the building.

- Draw a floor plan of the entire house showing **two** exits from each bedroom and **two** from the house. Since stairwells and hallways may be blocked during a fire, the plan should provide exits from bedroom windows.

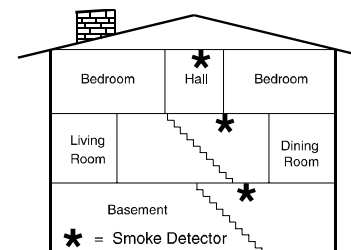

A smoke detector should be located on each story including basements, but excluding crawl spaces and unfinished attics.

Make copies of the plan and practice it with all family members.

- Prearrange a meeting place **outside and away from** the residence. Once out of the building, all occupants should immediately go to the pre-selected location to be accounted for.

Fire Safety (continued)


- Provide a barricade between family members and fire, smoke, and toxic gases (e.g. close all bedroom doors before retiring).
- Children should be instructed on opening their bedroom windows and exiting safely from the building. If exiting is not possible, they should be taught to stay at the open window and shout for help until it arrives.
- In the event of a fire alarm after retiring, wake the children by shouting to them from behind your closed door. Tell them to keep their bedroom doors closed.
- **If the top of your bedroom door is uncomfortably hot, do not open it.** There is most likely fire, intolerable heat, or smoke on the other side. Shout to all family members to keep their bedroom doors closed and to exit the building via alternate routes.
- If the top of the door is not uncomfortably hot, brace the bottom of the door with your foot, and the top with one hand, then open the door about one inch. Be prepared to slam the door shut if there is any pressure against the door or if any hot air rushes in.
- If there is no evidence of excessive heat or pressure, **leave the room and close the door behind you.** Shout appropriate instructions to all family members and immediately leave the building via the pre-planned routes. If heavy smoke is present, drop to your hands and knees and crawl to remain below the smoke level.

Installation Considerations

Proper location of detection devices is one of the most critical factors in a fire alarm system.

The following are some general considerations:

- Smoke detectors should **not** be installed in “dead air” spaces or close to ventilating or air conditioning outlets because smoke may be circulated away from the detector. Locations near air inlets should be favored.
- Avoid areas subject to normal smoke concentrations such as kitchens, garages, or near fireplaces.
- Do not install smoke detectors where normal area temperatures are above 100 degrees F (38 degrees C) or below 32 degrees F (0 degrees C).
- Areas of high humidity and dust concentrations should be avoided.
- The edge of ceiling mounted detectors should be no closer than 4 inches (10 cm) from any wall.
- Place the top edge of wall mounted detectors between 4 and 12 inches (10 to 30 cm) from the ceiling.

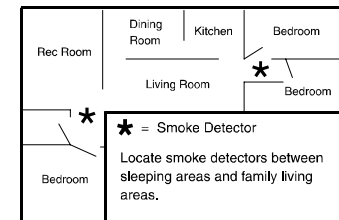

Personal Identification Numbers

General Information

When programming Personal Identification Numbers, it is helpful to know the following terms:

- **PIN:** Personal Identification Number. This is the 4- or 6-digit code users enter at the keypad to gain access to the system. A PIN may be assigned to each User Number 001 - 024.
- **Partition (Area):** This is the area the User has authority in. You may select Partition (Area) 1, 2 or both.
- **User Number:** This is the number that identifies each person using the system. There are 24 possible User Numbers (001 - 024).
- **Authority Level:** This number determines which functions each user will be able to perform (see "Pin Authority Levels").

Your system has the capacity to assign up to 24 PINs. The length of the PINs will be fixed at 4 or 6 digits. You cannot have both 4- and 6-digit PINs in the same system. If you wish to change the PIN length, it will be necessary to have your installing company make the change. If changed, all new PINs will need to be assigned. Each User number may have only one PIN assigned to it. Attempting to assign the same PIN to multiple User Numbers will result in a 3 beep entry error tone, and the entry will not be made.

User Number 001 is designated as a Master Code. It can be used to add, delete or change other PINs and will always have access to both partitions regardless of how it is programmed.

User Number 001 is shipped from the factory with the sequence of 123456. If four-digit PINs are used on your system then the default master code will be 1234. This code should be changed to one of your personal preference, and must be programmed as a Master Code. PINs should never be programmed with common sequences such as 1111 or 2468 because they are easily violated.

Removing a PIN

To remove a PIN: enter a [Master Code] [#] [0] [0], the [User Number] of the PIN to be canceled, and then [#] again.



User Number 001 can not be canceled in this manner.

Personal Identification Numbers (continued)

PIN Authority Levels

- 0 = Master:** Can enter all commands, add or change PINs, change time and date, bypass, arm, set autoarm, disarm, perform system tests, system reset, and view history. User number 001 must be a master code and must have authority 0. Any or all user PINs may be master codes.
- 1 = Unlimited:** Can enter all commands, bypass, arm, disarm, system reset, and perform system tests. Can not change PINs.
- 2 = General:** Can bypass, arm and disarm. Can not change PINs, perform system reset, or enter the [#] [7] or [#] [8] functions.
- 3 = Arm Only:** Can arm the system with [#] + [On] arming only. Can not perform any other functions including disarming.
- 4 = Temporary:** Valid only for a limited time. Can arm and disarm the system, but can not perform any other functions. This code will automatically be deleted after 15 days if you have not already done so.



The 15 day clock is reset to 15 days each time a Temporary PIN is assigned. All Temporary PINs expire at the same time.

- 5 = Duress:** When the system is armed and you disarm it using a duress code, a silent report is sent to the central station. Duress codes are intended to be used when the user is forced to disarm the system.
- 6 = Access:** When a PIN with Access Code authority is entered, any output programmed for Access Output (e.g. door strikes) will pulse on for 10 seconds (works when the system is armed or disarmed).

Personal Identification Numbers (continued)

This chart will guide you through the steps necessary to change a PIN.

You should write down your entries before you enter the Master Code Programming Mode and have them with you as you begin programming. Make your entries promptly. If a long delay occurs in your entries, the 3-beep error tone occurs and exits you from the programming mode.

It is recommended that this procedure be performed at a DS7447 keypad.
No visual clues will be given from the DS7443S or DS7445 keypads.

Steps to Change a PIN	Command Sequence	If Accepted, the Display Reads
# 1. Enter the Master Code Programming Mode.	[Master Code] + [#] [0]	"0 User Change" (display will scroll to this)
# 2. Enter a 0.	[0]	"Enter User No." (001..024)
# 3. Enter the User Number.	[0] [0] [1] through [0] [2] [4]	"Enter Authority " Level (0-6)
# 4. Enter the Authority Level.	[0] through [6]	"Enter Area or # for Both"
# 5. Enter the Area(s) (Partitions) this User has access to.	[1], [2] or [#] for both	"Enter PIN"
# 6. Enter the PIN.	Any 4 (or 6) digits. Do not press [#].	"Enter PIN Again. End with #"
# 7. Enter the PIN again followed by the [#] key.	PIN (same 4 (or 6) digits as above) then [#].	A long beep will sound to signify acceptance of the new PIN.

Error Displays

This chart explains the procedure for reading Error messages when the green Power Light is flashing.

Control panel problems are indicated by a flashing green Power Light and the DS7447 display reading “**Control Trouble, Enter #87.**” Error messages may only be read when the control is disarmed. Contact your installing company if the problems persist.

1. “**AC Power Failure**”* or LED #1 on steady**: There is a power failure and the control panel is running on backup battery.
2. “**Battery Trouble**”* or LED #2 on steady**: If the system has just been through a power failure, wait at least two hours for the battery to recharge, then enter [PIN] + [System Reset] to perform a battery test.
3. “**Communicator Err**”* or LED #3 on steady**: The communicator failed to communicate with the central station.
4. “**System Fault**”* or LED #4 on steady**: Internal error in the control panel’s circuitry or optional circuitry. These faults are designated as follows:
5. “**Keypad Fault**”* or LED #5 on steady**: One of the keypads is not responding to the control panel.
6. “**Aux Power Fault**”* or LED #7 on steady**: The Auxiliary power has been shorted.
7. “**Zone Trouble**”*: One or more of the zones is not responding to the control panel. This may also display during power-up (if so, ignore).

[#] [8] [7] will display	[#] [8] [9] will display
RAM Fault	System Fault 01
ROM Fault	System Fault 02
EEPROM Fault	System Fault 03
TRBL Zone Fault	System Fault 05
Octal Relay Fault	System Fault 20

Action Desired	Command Sequence***
Read the Error Display when the green Power Light is flashing	[PIN] + [#] [8] [7]
Clear the Error Display**** Caution: Clear the error display only on the advice of your installing company or if you are certain the problem has been remedied.	[PIN] + [System Reset]

* = the DS7447 display
 ** = the DS7443S and DS7445 displays
 *** = If in “Residential Mode”, a PIN is not required for these commands.
 **** = **Battery Trouble** and **Communicator Err** displays must be cleared by the [System Reset] command sequence even after the problem has been remedied. These displays will not self clear.
 All the other error displays will self clear from the keypads once the problem has been remedied.

continued on next page

Error Displays (continued)

8. **"Pt Exp Mssng"*** or LED #8 on steady**: The EX8 Zone Expansion Module is missing, defective or not communicating with the Options bus.
9. **"Pt Exp Tamper"*** or LED #8 on steady**: The EX8 Zone Expansion Module has a tamper condition.
10. **"Pt Exp Fault"*** or LED #8 on steady**: The EX8 Zone Expansion Module has had a DC overcurrent fault.
11. **"Keypad Tamper"*** or LED #6 on steady**: One of the keypad housings has been opened.

Testing Your System

This chart explains the procedure for performing a Zone Test.

It is recommended that the system be tested weekly.

The Zone Test is used to confirm that detectors will report alarms to the keypad.

A Zone Test works on all zones, except 24-hour zones and fire zones.

While the keypad is in a Zone Test, no control panel alarms will activate an alarm, except 24-hour zone alarms and fire alarms; these will override the Zone Test function.

Type of Test	Command Sequence*	What Will Happen	What To Do
Zone Test	[PIN] + [#] [8] [1]	<p>“Test Zone” will display on the DS7447 followed by the zone number of any zones that have not been tested.</p> <p>The DS7443S and DS7445 keypads will flash the zone LEDs of any untested zones. The DS7443S cannot display zones 7-32.</p> <p>“Now Testing” will display on the DS7447 followed by the zone number of the zone that is currently being violated (tested). It returns to “Test Zone” after the violation.</p> <p>The DS7443S and DS7445 will turn the zone LED on steady for the zone that is currently being violated (tested).</p> <p>The DS7443S cannot display zones 7-32.</p> <p>The DS7445 cannot display zones 9-32.</p>	<p>Test each detector one at a time as instructed by the installing company.</p> <p>To exit the Zone Test mode, enter your [PIN] followed by the [#] key.</p>

Testing Your System (continued)

This chart explains the procedure for performing a Battery Test.

If a power failure occurs, your control panel has a built-in battery that will continue to power the control panel for many hours. The control panel automatically recharges the battery when power is restored.

In addition to an automatic battery test performed every 2 minutes, the battery may also be tested manually.

This test also uses the battery to manually activate all the system sounders for 2 seconds ([#] [8] [5] only). If the battery voltage is low, a battery fault will occur (see *Error Displays*).

Type of Test	Command Sequence*	What will Happen	What to Do
Local Battery/ Sounder Test	[PIN] + [#] [8] [5]	<ul style="list-style-type: none"> • All keypad Lights will turn on. • The keypad sounder and all alarm sounding devices will operate for 2 seconds. 	<p>If test fails, the control panel will indicate a control problem. See <i>Error Displays</i>.</p> <p>If power in your building has been off recently, wait 2 hours for the battery to recharge and then try again.</p>
Battery Test	[PIN] + [System Reset]	<ul style="list-style-type: none"> • The control panel will perform a Battery Test. • The control panel will report a Low Battery or a Low Battery Restoral if necessary. 	

* = If in "Residential Mode", a PIN is not required for these commands.

Testing Your System (continued)

This chart explains the procedure for performing a Communicator Test.

This test is available only if your system transmits alarms and system information to a monitoring service, and has been programmed by the security installing company to permit communicator tests.

A long beep will initially sound to acknowledge the start of the test.

If the test is successful, the sounder will again issue one long beep.

If the test fails, the keypad sounder will turn ON continuously. To silence the sounder, enter [PIN] + [#] or press the [*] key.

Type of Test	Command Sequence**	What will Happen	What to Do
Communicator Test	[PIN] + [#] [8] [2]	<ul style="list-style-type: none"> A long beep will sound. A "Test" report is sent to the monitoring service. 	<p>If test fails, the keypad sounder will sound continuously. To silence the sounder, enter your PIN followed by the [#] key or the [*] key.</p> <p>Note: This test may take several minutes to complete because the control panel make XX attempts before it fails this test where XX is the number programmed in "Dial Attempts".</p>

** = If in "Residential Mode", a PIN is not required for this command.

Event History Readback

This chart explains the procedure for performing an Event History Readback.

The History Buffer stores the last 100 events in memory. All events are stored in non-volatile memory and will be retained even in the event of a power loss. The DS7447 can display all of these events.

The DS7443S and DS7445 keypads will only display those zones that have alarmed. The DS7443S cannot display zones 7 - 32; the DS7445 cannot display zones 9 - 32.

DS7447 Only: Scrolling through the History Events.

Event History Readback operation: To begin scrolling back through the events, press the [#] key. The [#] key will scroll you back through the history line by line. The [9] key will scroll you back in reverse chronological order by event. A [6] will scroll you back up through the events (toward the most recent) by event.

Each event consists of two lines or display screens. The first line/screen will be the event title and user. The second line/screen will be the date of the event or the change being made.

To exit the Event History Mode, press the [*] key or wait 20 seconds and the keypad will exit automatically.

Type of Test	Command Sequence**	What will Happen	What to Do
Event History Readback	[PIN] + [#] [8] [9]	<p>The last event to take place will be displayed on the DS7447 keypad.</p> <p>For the DS7443S and DS7445 keypads, the zone LEDs will flash for any zones that have alarmed. The DS7443S keypads cannot display zones 7 - 32. The DS7445 keypads cannot display zones 9 - 32.</p>	<p>For the DS7447 keypad, scroll through the events by using the [9], [6], and [#] keys. See Event History Readback operation description above.</p> <p>To exit from the Event History Mode, press the [*] key.</p>

** = If in "Residential Mode", a PIN is not required for this command.

Glossary

Access Control PIN

A special code used to activate electric door locks or other mechanisms connected to the control panel that require this code to turn them on or off.

Armed/Disarmed

Arming the system (burglar zones) means to turn it on. Disarming the system means to turn it off. Remember, fire protection (if installed) is always Armed/on.

Central Station/Monitoring Service

A facility used to continuously monitor phone signals from your system. Trained personnel there dispatch proper authorities as necessary.

Custom Arming

A type of arming that uses the [#] [4] sequence. It is only a valid sequence if programmed by the installing company. It is a specific type of arming designed for your individual installation needs. Ask your installing company to explain Custom Arming further.

Disarming Command Sequence

The sequence of keys you press at the keypad to disarm the system and/or silence alarms. It consists of your PIN followed by the [Off] button.

Entry Delay

A predetermined amount of time that allows entry into an armed area.

Exit Delay

A predetermined amount of time that allows you to exit an area just after you have armed it.

Faulted Zone

A zone that is not ready to arm (e.g. an open door or window). It may also be described as being violated.

Force Arming

Force Arming is a way of arming the system by bypassing zones that are not ready to arm. This reduces the level of security and should be avoided.

Installing Company

The company that physically installed the system. It may or may not be the same company who monitors the system.

Local System

A system that has a control panel that is **not** programmed to call a monitoring service. It will sound only local (on sight) bells or sirens when an intrusion or fire alarm is detected.

Monitored System

A system that uses phone lines to notify a monitoring service of select abnormal events such as burglar or fire alarms.

Zone

A Zone is an input to the control panel. There are eight hard-wired zones on the control panel. A zone is usually some type of detection device whether it be designed for burglar or fire.

Zone Bypassing

Zone Bypassing is a way of arming the system by deliberately eliminating zones to be armed.

Zone Function

A Zone Function is the description of how a zone behaves in the system. Zone Functions usually define how a zone will respond when armed or when it detects an alarm.

Quick Reference Guide

This system should be tested weekly to ensure it is functioning properly. If problems are detected in testing or changes are noticed in normal operation, call your installing company for service. The manufacturer recommends replacing the system battery every 3 to 5 years.

Monitoring Service Phone Number: _____

Monitoring Service System Number: _____

Installing Company Phone Number: _____

Protection	Protection	Protection
Zone 1 _____	Zone 12 _____	Zone 23 _____
Zone 2 _____	Zone 13 _____	Zone 24 _____
Zone 3 _____	Zone 14 _____	Zone 25 _____
Zone 4 _____	Zone 15 _____	Zone 26 _____
Zone 5 _____	Zone 16 _____	Zone 27 _____
Zone 6 _____	Zone 17 _____	Zone 28 _____
Zone 7 _____	Zone 18 _____	Zone 29 _____
Zone 8 _____	Zone 19 _____	Zone 30 _____
Zone 9 _____	Zone 20 _____	Zone 31 _____
Zone 10 _____	Zone 21 _____	Zone 32 _____
Zone 11 _____	Zone 22 _____	

System Features Reference Guide

Audible Alarm Signaling Device Sounds

Intrusion Pulse Continuous

Fire Pulse Continuous

Keypad Supplemental Alarm [B] Key

Continuous Silent

This system has the Duress Alarm feature. Yes No

This system has the communicator test feature. Yes No

This system is partitioned. Yes No

	Partition 1 Zones	Partition 2 Zones	Common Zones
1-	_____	_____	_____
2-	_____	_____	_____
3-	_____	_____	_____
4-	_____	_____	_____
5-	_____	_____	_____
6-	_____	_____	_____
7-	_____	_____	_____
8-	_____	_____	_____
9-	_____	_____	_____
10-	_____	_____	_____
11-	_____	_____	_____
12-	_____	_____	_____
13-	_____	_____	_____
14-	_____	_____	_____
15-	_____	_____	_____
16-	_____	_____	_____

	Partition 1 Zones	Partition 2 Zones	Common Zones
17-	_____	_____	_____
18-	_____	_____	_____
19-	_____	_____	_____
20-	_____	_____	_____
21-	_____	_____	_____
22-	_____	_____	_____
23-	_____	_____	_____
24-	_____	_____	_____
25-	_____	_____	_____
26-	_____	_____	_____
27-	_____	_____	_____
28-	_____	_____	_____
29-	_____	_____	_____
30-	_____	_____	_____
31-	_____	_____	_____
32-	_____	_____	_____

Turning On (Arming) Your System

Normal Arming:

[PIN] + [On]

Perimeter Arming, no entry delay:

[PIN] + [No Entry] + [Perimeter Only]

Perimeter Arming, with entry delay:

[PIN] + [Perimeter Only]

Maximum Security Arming:

[PIN] + [No Entry] + [On]

System Features Reference Guide (continued)

Custom Arming

[PIN] + [#] [4] Arms _____

Force Arming

Enter an arming command sequence followed by the [Bypass] key. The maximum number of zones that can be forced armed is _____

Zone Bypass

[PIN] + [Bypass] followed by the 2-digit Zone number.

Quick Arming Your System

Normal Arming: [#] + [On]

Perimeter Arming, no entry delay:
[#] + [No Entry] + [Perimeter Only]

Perimeter Arming, with entry delay:
[#] + [Perimeter Only]

Maximum Security Arming:
[#] + [No Entry] + [On]

Turning Off (Disarming) Your System

Enter your [PIN] followed by [Off]

Chime Mode

[PIN] + [#] [7]

Zone Test

[PIN] + [#] [8] [1]

Read Event History

[PIN] + [#] [8] [9]

Battery Test

[PIN] + [System Reset]

Communicator Test

[PIN] + [#] [8] [2]

Fire Reset

[PIN] + [System Reset]

Fire Trouble

[PIN] + [Off] to silence, [PIN] + [System Reset] to clear

Remote Program Dial-out

[PIN] + [#] [8] [3]

Remote Program Answer

[PIN] + [#] [8] [6]

Local Battery/Sounder Test

[PIN] + [#] [8] [5]

Error Display

[PIN] + [#] [8] [7]

Error Display Reset

[PIN] + [System Reset]

Clear Zone Bypass

[PIN] + [Bypass] [*] to clear

Access Control

[PIN] + [Off]

Set Delayed Arming

[PIN] + [#] [9] [9]

Delay Auto Arm by 30 Minutes

[PIN] + [OFF]

Select Partition 1 only Arming/Disarming

[PIN] + [#] [#] + [Arm Sequence]

Select Partition 2 only Arming/Disarming

[PIN] + [#] [#] [#] + [Arm Sequence]

Index

A

AC Power Failure 11, 29, 30
Access Control 14
Access Control PIN 35
Armed 35
Arming
 Force 11
 Quick 9
Arming (Turning ON) System 7
Authority Level 26
Automatic Arming 17
Aux Power Fault 29

B

Battery Test 32
Battery Trouble 29, 30
Bypass 12

C

Central Station 35
Change a PIN 28
Chime Mode 13
Communicator Err 29, 30
Communicator Test 33
Control Panel 2
Control Station 2
Control Trouble 29
Custom Arming 6, 35

D

Delayed Arming 19
Delayed Automatic Arming 18
Disarmed 35
Disarming Command Sequence 35
Disarming Under Duress 21
DS7445 4
DS7447 4

E

Emergency Procedures 20
Entry Delay 35
Event History Readback 34
Exit Delay 35

F

Faulted Zone 35
Fire Alarms 20
Fire Key 22
Fire Reset 23
Fire Safety 24
Fire Trouble 23
Force Arming 11, 35

H

History Buffer 34

I

Installing Company 35

K

Keypad Fault 29

L

Line Seizure 2
Local System 35

M

Monitored System 35
Monitoring Service 35

N

Not Ready 7

P

Panic Key 22
Partition 26
Partitioned 6
Partitioning 6
Personal Identification Numbers 26
PIN 26
PIN Authority Levels 27
Protected Zones 2

Q

Quick Arming 9

R

Ready to Arm 7
Removing a PIN 26

S

Setting Delayed Arming 19
Setting the Date 15
Setting the Time 16
Silencing Alarms 20
Special Emergency Key 22
System Fault 29, 30

T

Turning ON (Arming) System 7

U

User Number 26

Z

Zone 35
Zone Bypassing 12, 35
Zone Function 35
Zone Test 31
Zone Trouble 29



**For
Service**

Please contact your Installing
Company at the above number

