


W3000


MOST CLIENTS BELIEVE THEIR CODE STARTS WITH AN 1, BUT ACTUALLY YOU HAVE TO REMOVE THE 1 FROM THE FRONT OF THEIR KEYPAD CODE TO DO THE OTHER PROGRAM FEATURES.

EXAMPLE: KEYPAD CODE 12345
 ACTUAL KEYPAD CODE 2345

ANY KEYPAD

ARM/DISARM/RESET:	1 + CODE
INTERIOR A ON/OFF:	3 + 1 + CODE
INTERIOR B ON/OFF:	3 + 2 + CODE
INTERIOR C ON/OFF:	3 + 3 + CODE
SECONDARY CODE ARM/DISARM/RESET (PARTITION 1):	4 + 1 + CODE
SECONDARY CODE ARM/DISARM/RESET (PARTITION 2):	4 + 2 + CODE
SECONDARY CODE ARM/DISARM/RESET (PARTITION 3):	4 + 3 + CODE
CONTROLS AUXILIARY OUTPUT:	4 + 4 + CODE
DURESS:	5 + CODE
FORCEARM AROUND ALL OPEN ZONES:	6 + CODE

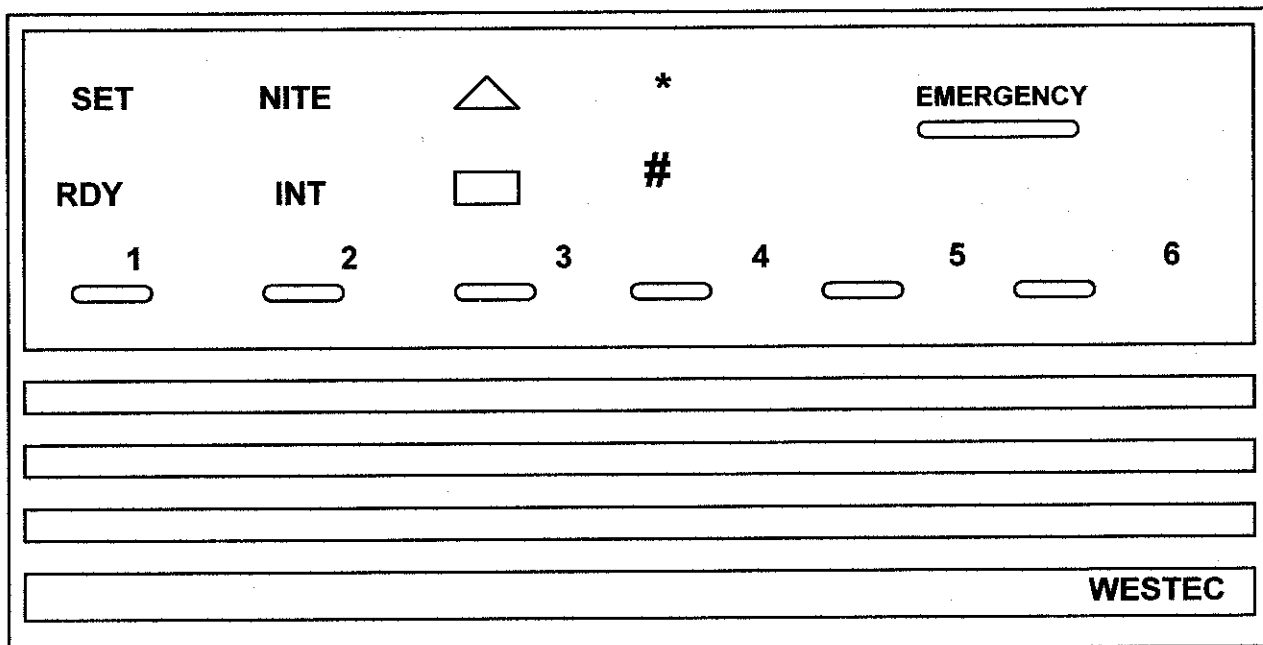

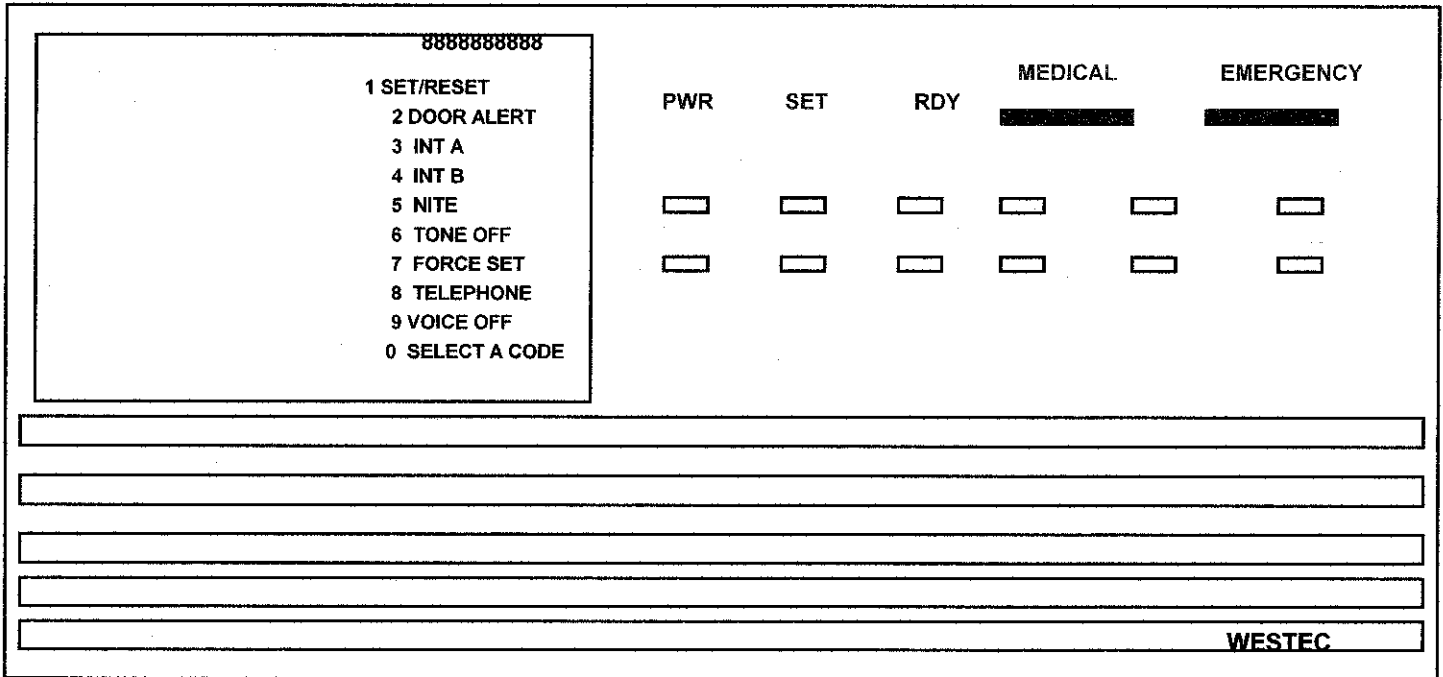

MASTER KEYPAD

- ENTERS MENU MODE: 2 + CODE
- SILENCES TROUBLE SOUNDS 2 + 2 + CODE
- TRIGGERS SYSTEM TEST 2 + 3 + CODE
- ADD SECONDARY CODE 2 + 4 + CODE + 4 + 1 +
SECONDARY CODE (UP TO 7
DIGITS) WAIT 10 SECONDS TO
EXIT MODE + CTRL
- CHIME ON/OFF: 2 + CODE + 2 + CTRL
- ADD TELEPHONE NUMBER: 2 + CODE + 8 + TELEPHONE
NUMBER (10 DIGITS) + CTRL
- REMOVE TELEPHONE NUMBER: 2 + CODE + 8 + CTRL

MAIN PANEL

TEST:

TROUBLE SILENCE:

ON/OFF SWITCH:

TEST BUTTON (BURGLARY
MUST BE DISARM)

TROUBLE BUTTON

OPEN ACCESS DOOR,
SWITCH LOCATED IN LOWER
LEFT-HAND SIDE BETWEEN
BIG BLACK BOX & SMALL
BLUE BOX, TO TURN SYSTEM
OFF PUT SWITCH OFF. TO
TURN SYSTEM ON PUT
SWITCH TO ON

